

On Delivery

NKD™ Complete Scooters

(The following is an addition to the assemble procedure described in your user's manual.)

Tighten bolts:

- Wheel axels
- Compression bolt
- Clamp

Relevant for (series):

- Team
- Rally
- Octane
- Fuel
- Diesel
- Turbine
- Nitro
- Extreme
- UFO*
- Gravity*

Every

10 Hours

NKD™ Complete Scooters

Wheel bearings:

- Lubrication

Relevant for (series):

- Team
- Rally
- Octane
- Fuel
- Diesel
- Turbine
- Nitro
- Extreme
- UFO*
- Gravity*

Every

20 Hours

Common wear:

Grip tape & Wheel bearings:

- Inspect for wear – replace if needed

NKD™ Complete Scooters

Headset:

- Lubrication and service

Relevant for (series):

- Team
- Rally
- Octane
- Fuel
- Diesel
- Turbine
- Nitro
- Extreme
- UFO*
- Gravity*

Every

50 Hours

Common wear:

Wheels & Grips:

- Inspect for wear – replace if needed

Service Intervals

Performing the right maintenance on your NKD products not only ensures years of worry-free riding, but will also keep performance optimal and enhance your experience on the scooter. Each service interval indicates the maximum number of riding hours designated for each type of recommended maintenance. Depending on the discipline and environmental conditions in your location, your riding style and skill level, you may see more optimum performance if you service your NKD products at shorter intervals.

* New products

Note: Hourly service intervals may vary based on product and model year. Refer to the NKD Spare Parts Catalog and product service guides available at NKD-scooters.com/service